



19

**PARTI DI RICAMBIO
ORIGINALI
ORIGINAL
SPARE PARTS**

Smeg



www.micromic.com



SM810930069

810930069 - 810930070
Smeg
ITA Candeletta accensione 34mm cavetto 550mm
ENG Ignition glow plug 34mm with 550mm cable



SM810930078

810930051 - 810930078
Smeg
ITA Candeletta accensione 34mm cavetto 550mm
ENG Ignition glow plug 34mm with 550mm cable



SM931331388

931331388 - 931331025
Smeg
ITA Cerniera dx/sx porta forno
ENG Oven Door Hinge L/R



SM811730383

811730383 - 811730241
Smeg
ITA Commutatore forno 0-1-2- Alfa 43
ENG Oven selector switch 0-1-2 Alfa 43



SM844090739

844090739 - 844090174 - 844090249 - 844090514
Smeg
ITA Griglia inox forno 440x340mm
ENG Oven rack 440x340mm Inox



SM039290137

39290137
Smeg
ITA Ventola motore forno 7 pale
ENG Oven motor fan, 7 Blades



SM903903

903903 - Sgrassante
Smeg
ITA Sgrassante e decalcificante in polvere confezione da 12 bustine
ENG Degreaser and descaler powder – pack of 12 sachets



SM691410477

691410477
Smeg
ITA Cestello portaposate grigio 180x90mm
ENG Cutlery basket grey 180x190mm



SM690074493

690074493 - 697690335
Smeg
ITA Serratura bloccaporta lavastoviglie con distanziale
ENG Dishwasher door lock with spacer



ZSM764730231

764730231
Smeg
ITA Maniglia leva lavastoviglie
ENG Dishwasher lever handle



ZSM806890547

806890547
Smeg
ITA Resistenza a tubo blk d32 230v 1800w per lavastoviglie
ENG Resistance to Blk D32 230V 1800W tube for dishwasher